



54/55

49

17

24

23

22

21

20

19

18

16

15

14

13

12

11

10

9

8

7

6

5

4

3

2

1

51

50

28

29

26

25

27

31

32

30

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

SPARE PARTS.

THUNDER 380 / 380 Combat / 22

1. Slide
2. Rear sight
3. Rear sight blade
4. Rear sight spring
5. Rear sight screw
6. Extractor
7. Extractor spring
8. Extractor pin
9. Firing pin
10. Firing pin spring
11. Manual Safety lever / Decocking
12. Manual Safety spring
13. Manual Safety stop pin
14. Slide catch spring
15. Slide catch
16. Barrel pin
17. Ejector
18. Frame
19. Slide stop
20. Slide stop spring
21. Disassembly lever
22. Trigger spring
23. Trigger
24. Trigger pin
25. Firing pin stop spring
26. Firing pin stop
27. Grip pin
28. Drawbar / Disconnecter
29. Drawbar / Disconnecter spring
30. Magazine catch
31. Magazine catch spring
32. Magazine catch pin
33. Hammer
34. Hammer spring guide
35. Hammer spring
36. Sear
37. Sear pin
38. Hammer release cam
39. Hammer pin
40. Hammer release cam bushing
41. Hammer release cam pin
42. Magazine safety
43. Magazine safety spring
44. Magazine tube
45. Magazine follower
46. Magazine spring
47. Magazine base rivet
48. Magazine base
49. Grip screw
50. Barrel
51. Recoil spring
54. Grip (Right)
55. Grip (Left)
60. Locking
61. Safety key
62. Automatic safety
65. Hammer pin washer
66. Drawbar retention ring