



SPARE **PARTS.**

1. Slide
2. Front sight
3. Barrel
4. Recoil spring
5. Guide rod
6. Extractor pin
7. Loaded chamber indicator
8. Loaded chamber indicator elastic pin
9. Loaded chamber indicator spring
10. Extractor
11. External extractor spring
12. Internal extractor spring
13. Internal firing pin elastic pin
14. External firing pin elastic pin
15. Rear sight
16. Rear Sight Insert (U)
17. Automatic firing pin safety spring
18. Automatic firing pin safety
19. Firing pin
20. Firing pin spring
21. Frame
22. Trigger
23. Trigger spring
24. Trigger pin

25. Disassembly bar
26. Disassembly bar stop
27. Disassembly bar spring
28. Barrel cam
29. Barrel cam bushing
30. Slide catch (left)
31. Slide catch (right)
32. Slide catch spring
33. Drawbar
34. Drawbar Spring
35. Safety bar (left)
36. Safety pin
37. Safety spring
38. Hammer guide bush
39. Ejector
40. Safety stop pin
41. Hammer stop
42. Disconnecter
43. Hammer
44. Hammer strut pin
45. Hammer release
46. Automatic safety cam
47. Safety bar (right)
48. Safety elastic pin

THUNDER **PRO** / THUNDER **Ultra Compact PRO**

49. Magazine catch
50. Magazine catch bush
51. Magazine catch spring
52. Magazine catch pin
53. Safety key \*
54. Internal locking system \*
55. Internal locking system bearing \*
56. Internal locking system spring \*
57. Internal locking system stop \*
58. Safety drawbar spring
59. Hammer strut
60. Hammer spring
61. Grip catch
62. Sear pin
63. Sear spring
64. Sear
65. Grip
66. Magazine
67. Feeder platform
68. Magazine spring
69. Magazine bottom holder
70. Magazine bottom

**\* Only in versions with ILS**